


COPPER CARDY CAT JOHN





Install The rest on the bow
Using the screw provided mount the rest on your bow as shown here. Keep the mounting bracket level. Once you have it in position, lock it in place with the set screw.

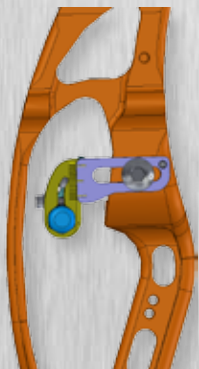

Set the rest height
With the rest in the full upward position, set the rest height so the arrow passes right through the center of the mounting hole. See the diagram.



Install the Drop Cord
Slip the drop cord through the cable nearest to the rest. Draw the bow to full draw and check to see if the rest is being pulled to full height. Continue adjusting the drop cord until you have it pulling the rest to full height without putting too much pull pressure on the cable. Once you have found the right position, Lock it in place with Dental Tape or serving thread.

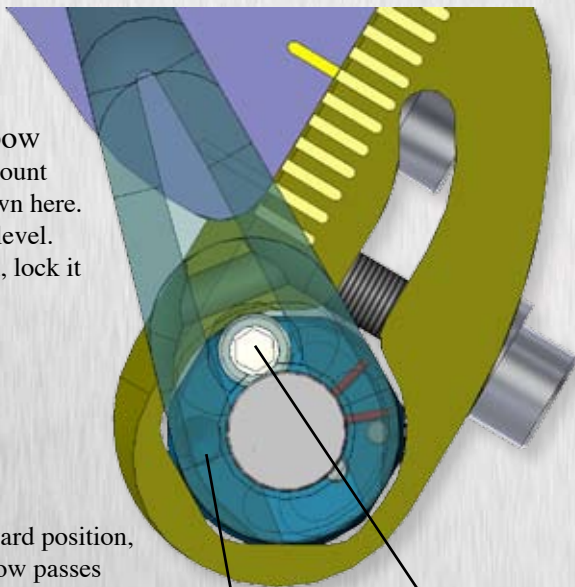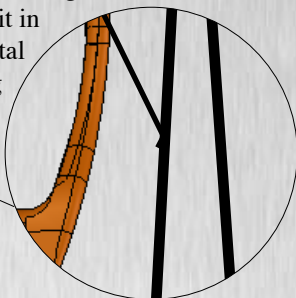

Left hand screw position

Access hole

Converting to Left Hand
Tilt rest up until the access hole is over the stop screw. Using your allen key, loosen the stop screw until it clears the hole. Allow the rest to rotate down until the screw aligns with the left hand screw position. Insert and tighten the screw. Flip the rest over and insert it into the mounting bracket on the opposite side and then follow the rest of the mounting instructions as is.